

PS2 to PS3 Adapter

Set-up instructions for a guitar controller and Guitar Hero 2

For right-handed players

Instructions to play Guitar Hero 2 in Righty Mode (left hand used for colored frets, right hand to strum):

- Flip the switch on the side of the adapter to GH2
- Plug in your guitar into the adapter
- Plug in your adapter to the PS3
- Insert your Guitar Hero 2 game into your PS3 and allow it to load
- Press the PS button on the adapter any time after you see the PlayStation 2 logo screen. (On the adapter you will see the player number lights go from flashing to having the #1 light lit, and the GH2 lights will go from green to red after 5 seconds from pressing the PS button.)
- There are 2 ways to navigate through the menus on Guitar Hero 2:
 - 1) You can remain in Righty mode and use the following:
 - To CONTINUE or ADVANCE in game menus, press the (ORANGE FRET + STRUM at the same time)
 - To BACK OUT or CANCEL in game menus, press the (RED FRET + STRUM at the same time)
 - 2) You can change the adapter to Menu Mode by pressing the (START button + GREEN FRET at the same time). (You will see the GH2 lights change from red to green.) You can perform this adapter mode change at any time, even during loading screens. Menu Mode simply allows you to control the menus through the game's normal functionality. Although Menu Mode is not needed, you can use the Menu Mode if you prefer to easily control the in-game menus by following the button prompts rather than pressing a different fret color + strum while in Righty mode.
 - While the adapter is in Menu Mode you will be able to navigate through menus normally. For example: pressing the GREEN FRET will advance you through menus and pressing the RED FRET will cancel or back out of menus.
- Advance through the menus to select your Game Mode, Song and Difficulty.
 - If you switched to Menu Mode to navigate through menus, then you need to switch back to Righty mode to play songs by pressing (RED FRET + START button at the same time at any time). (You will see the GH2 lights change from green to red.) Remember: you can perform this adapter mode change at any time, even during loading screens.
- Get ready to play!

For left-handed players

Instructions to play Guitar Hero 2 in Lefty Mode (right hand used for colored frets, left hand to strum):

- Flip the switch on the side of the adapter to GH2
- Plug in your guitar into the adapter
- Plug in your adapter to the PS3
- Insert your Guitar Hero 2 game into your PS3 and allow the game to load
- Press the PS button on the adapter any time after you see the PlayStation 2 logo screen. (On the adapter you will see the player number lights go from flashing to having the #1 light lit, and the GH2 lights will go from green to red after 5 seconds from pressing the PS button.)
- At any time, press the (YELLOW FRET + START at the same time) to change the adapter to Lefty flip mode. (You will see the GH2 light change from red to yellow.)
- There are 2 ways to navigate through the menus on Guitar Hero 2:
 - 1) You can remain in Lefty mode and use the following:
 - To CONTINUE or ADVANCE in game menus, press the (GREEN FRET + STRUM at the same time)
 - To BACK OUT or CANCEL in game menus, press the (BLUE FRET + STRUM at the same time)
 - 2) You can change the adapter to Menu Mode by pressing the (START button + GREEN FRET at the same time). (You will see the GH2 lights change from yellow to green.) You can perform this adapter mode change at any time, even during loading screens. Menu Mode simply allows you to control the menus through the game's normal functionality. Although Menu Mode is not needed, you can use the Menu Mode if you prefer to easily control the in-game menus by following the button prompts rather than pressing a different fret color + strum while in Lefty mode.
 - While the adapter is in Menu Mode you will be able to navigate through menus normally. For example: pressing the GREEN FRET will advance you through menus and pressing the RED FRET will cancel or back out of menus.

- Advance through the menus to select your Game Mode, Song and Difficulty.
 - If you switched to Menu Mode to navigate through menus, then you need to switch back to Lefty mode to play songs by pressing (YELLOW FRET + START button at the same time at any time). (You will see the GH2 lights change from green to yellow.) Remember: you can perform this adapter mode change at any time, even during loading screens.
- Get ready to play!

(NOTE: Remember to set the game to Lefty Flip Mode in the options menu in order for the fret keys to match on the screen)

*** Please note: This adapter does not support the following for Guitar Hero 2:**

- Tutorial Mode
- Guitar Tilt for Star Power (press the SELECT button to activate Star Power)
- Hammer-ons or Pull-offs